



Science&Technology, Make Life Better

JFEye


2.8.01@iPHONE Introduction

Hangzhou Jufeng Technology Co., Ltd.

2017.02.04


JFEye is video monitoring software for IPC and DVR. With cloud technology, easy log in by the device's serial number to show the live view monitoring video to phone and operate correspondingly.

This application supports iOS which is higher than 6.1 released. The manual will mainly introduce how to use JFEye.

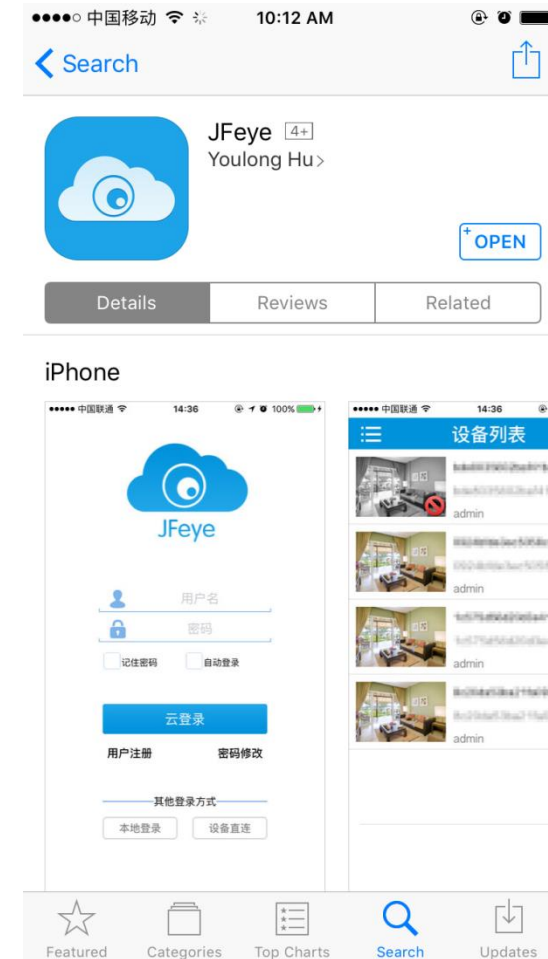

- Support log in with cloud technology
- Support real time live view
- Support remote playback
- Support local recording and play
- Support snapshot and pictures searching
- Support bidirectional talk
- Support PTZ control
- Support scanning serial number by QR code
- Support cloud user register and modify
- Support remote device add, edit and delete
- Support local device add, edit and delete
- Support adding device by address
- Support manually searching device in LAN
- Support version updating automatically

CONTENTS

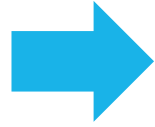

1

Device End Config

2

About Login

3

Main Menu

4

Live Video


5

Update Log

JFEYE-Device End Config



Science&Technology, Make Life Better

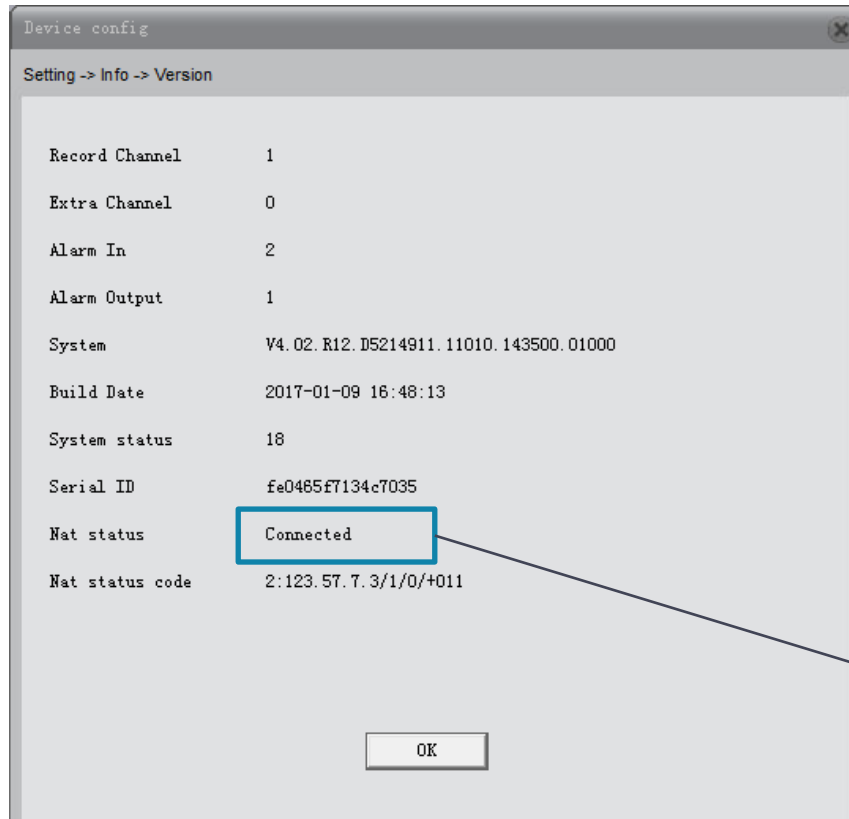


Tips:

Check your device's net status. When a device is in a LAN, you don't have to set your DNS sever address.

But if you want to access the device using the cloud service, you will have to set your DNS server address.

Now you are connected.

CONTENTS

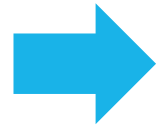

1

Device End Config

2

About Login

3

Main Menu

4

Live Video

5


Update Log

About login — Three Ways to Login



Science&Technology, Make Life Better

中国移动 2:26 PM

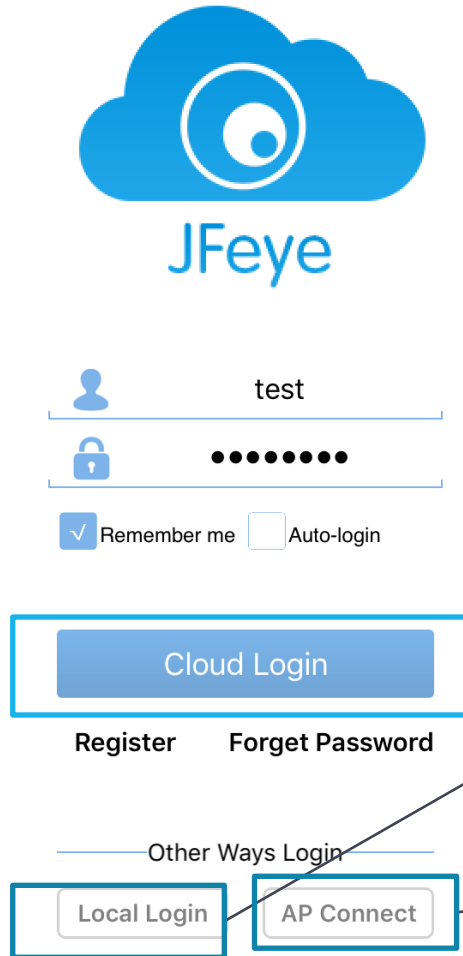

Cloud Login

Account login.

Local login

Direct access to the device list.

AP Connect:

You can connect to the device which is Connecting with same Wi-Fi

About login — Register and Password



Science&Technology, Make Life Better

中国移动 上午10:15 61%

Register

User Name

Password

Confirm Pass...

Email

Register

Cancel

Register : User name can only be between 3 to 20 alphanumeric and use email to reset password.

中国移动 下午3:34

Password

User Name

Old Passw...

New Passw...

Confirm_N...

Confirm

Cancel

Password : modify the password

CONTENTS



1

Device End Config

2

About Login

3

Main Menu

4

Live Video


5

Update Log

Main Menu




Science&Technology, Make Life Better

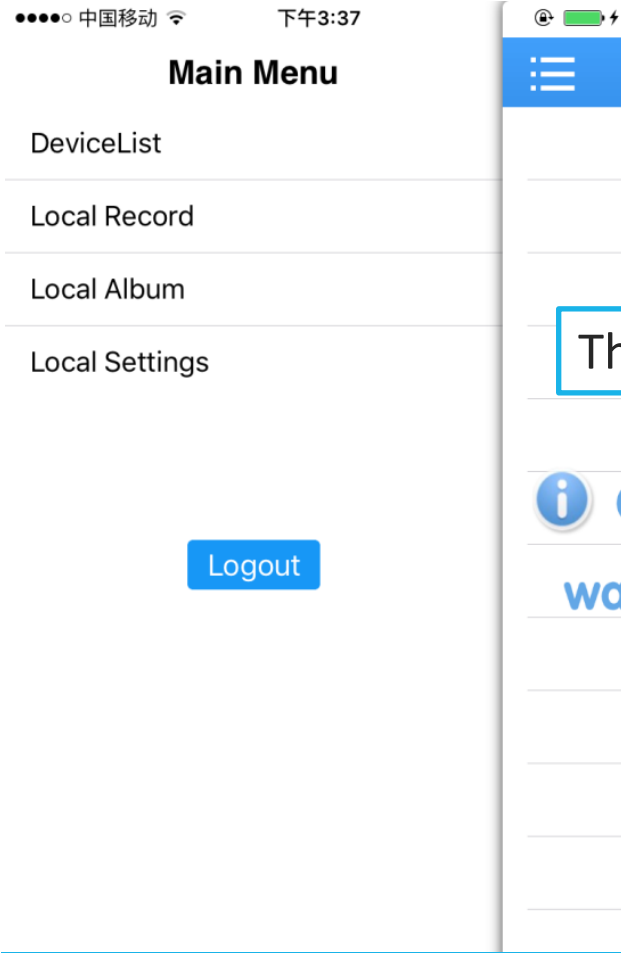

Local login interface

The only difference.

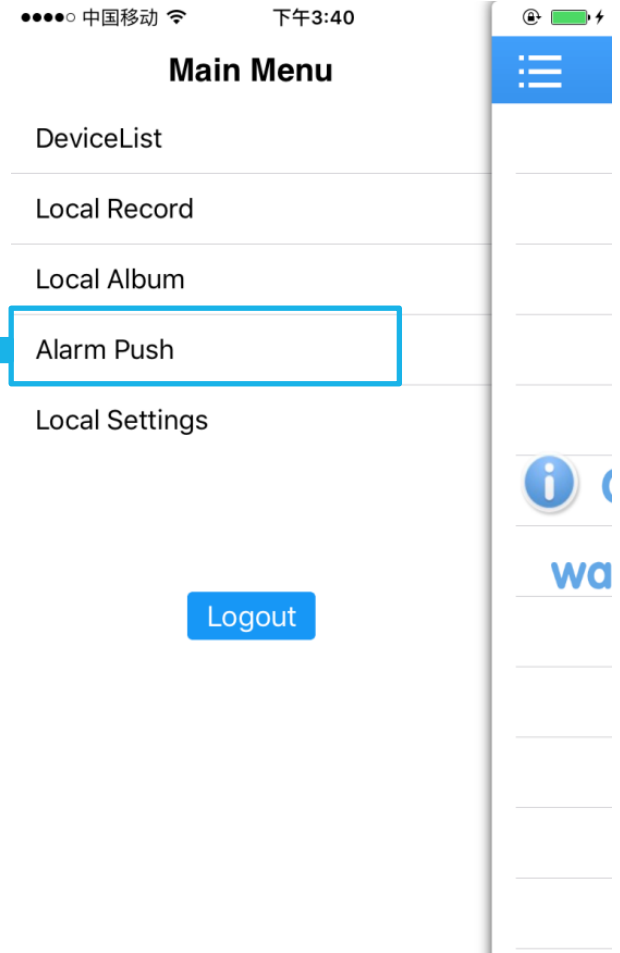

Cloud login interface

Main Menu—Device List



Science&Technology, Make Life Better



Display the status of devices(online/offline).

- Online device
- Offline device

The first picture the device took will be used as the cover of the device list.


Display the detailed information of the device.

- Name of the device
- Serial number of the device

Add Device—Manually add



Science&Technology, Make Life Better

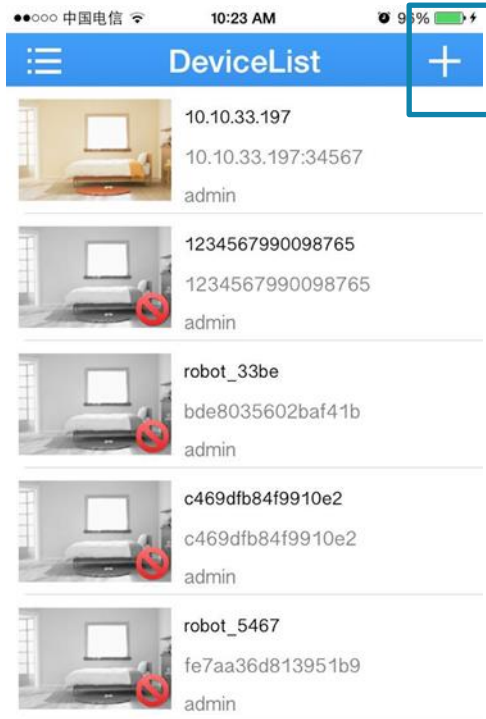

To add more device, you should input :


- Device name ;
- Serial number, IP, DDNS or scan QR Code ;
- Username ;
- Password ;
- Port (optical) .



Add Device—Quick configure



Science&Technology, Make Life Better

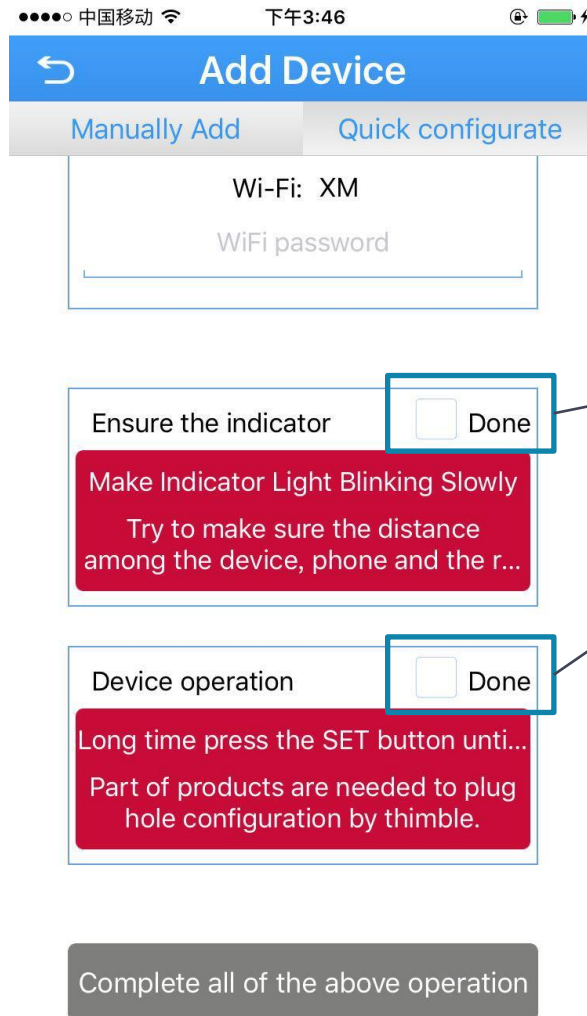


Add devices quickly by Wi-Fi. We had special wireless cameras. You just need to click two boxes as showing left, it would be much easier to add those wireless cameras.


Local Record & Local Album



Science&Technology, Make Life Better




Tips :
These videos and pictures will be stored in mobile phone storage space



Main Menu—Settings



Science&Technology, Make Life Better

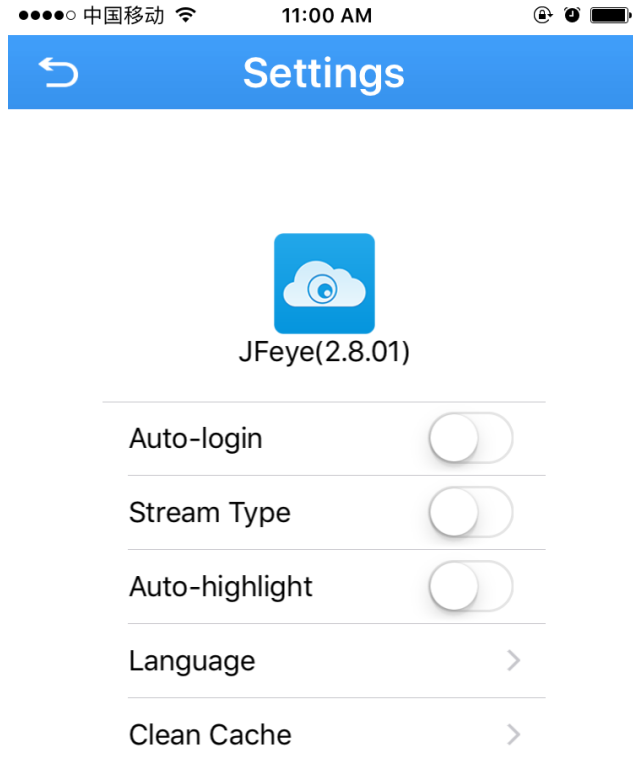

Auto-login

you will login automatic when you open the XMEye software without inputting username and password.

Language

You can choose auto/English/Zh-hans/Zh-hant in there.

Cache clean

clear the cache.

Stream Type

When you connect the device by IP or P2P, open Stream Type ,the video is main stream, Otherwise the video is sub stream.



Auto-highlight

The screen will be highlight automatically when you login.

Menu—Alarm Push Preparation



Science&Technology, Make Life Better

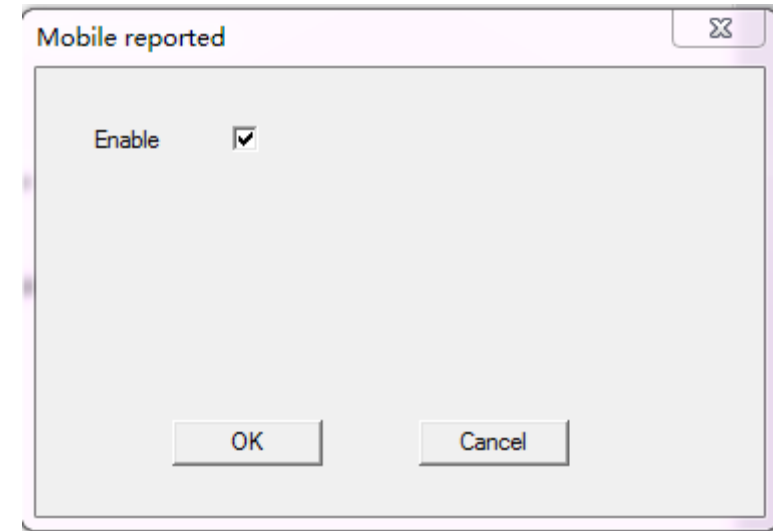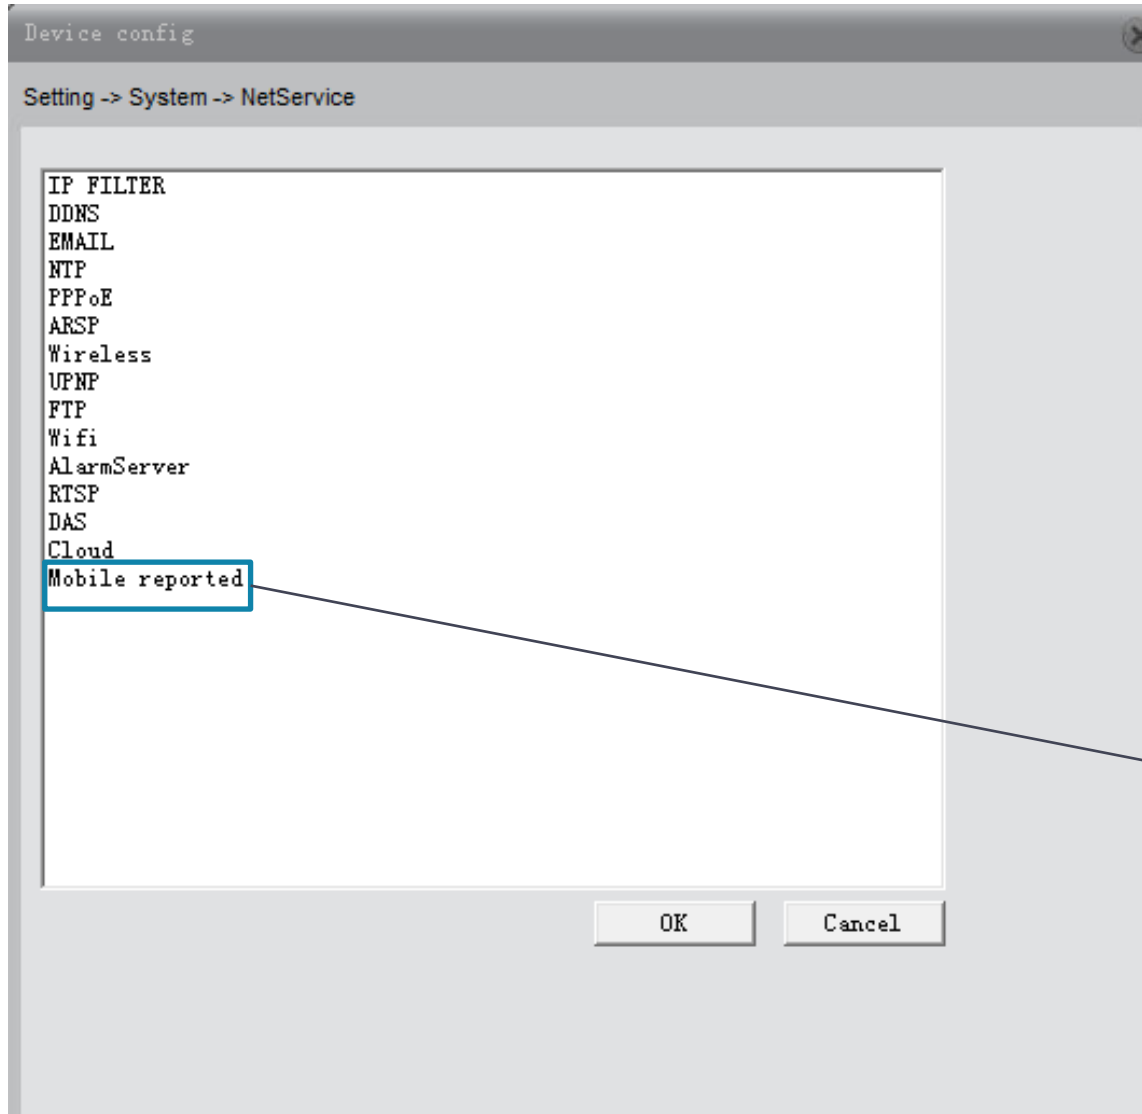

- In order to use this function, you have to set your device right in the first place. First, you have to enable Mobile reported(setting->system->NetService).
- Double click it, then tick “enable”

Menu—Alarm Push Preparation



Science&Technology, Make Life Better



There are four kinds of alarm that you can enable. You can enable the alarm in device local site for insurance or you can just enable them in JFEye → Live Video → Menu → Alarm Config.

Menu—Alarm Push Preparation



Science&Technology, Make Life Better

Device config

Setting -> Alarm -> Video Motion

Channel	1		
Enable	<input checked="" type="checkbox"/>		
Sensitivity	Middle	Region	Setting

Period	Setting	Interval	2 Sec
Alarm Output	1	Delay	10 Sec
Record Channel	1		
Snapshot	1		
PTZ Activation	Setting	Delay	10 Sec
		<input type="checkbox"/> Send Email	
<input type="checkbox"/> Buzzer		<input type="checkbox"/> FTP	
<input checked="" type="checkbox"/> Mobile reported		<input type="checkbox"/> Write log	


Copy Paste Refresh **OK** Cancel

Tick "enable" and "mobile reported" then click "OK".

Main Menu—Alarm Push



Science&Technology, Make Life Better

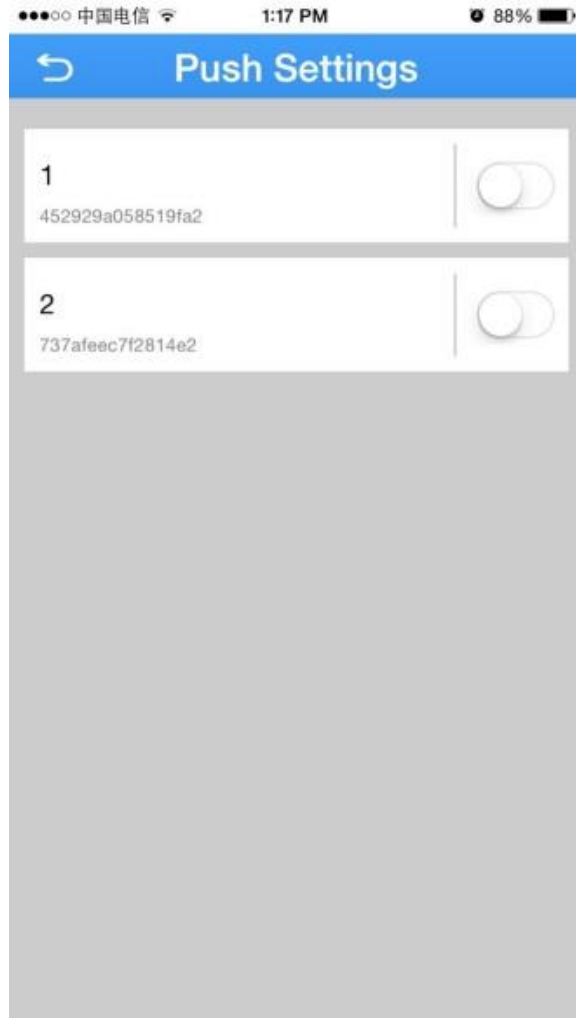

You can check the alarm push information here.

Your APP can be configured whether to accept the alarm push information or not.

You have received the alarm message

CONTENTS

1

Device End Config

2

About Login

3

Main Menu

4

Live Video

5

Update Log



Live Video



Science&Technology, Make Life Better




Full screen button


Click the full screen button, the screen will display full screen, as like below image

Video area

- ① Pause/Start
- ② Audio button
- ③ Menu
- ④ Screenshot
- ⑤ Video switch

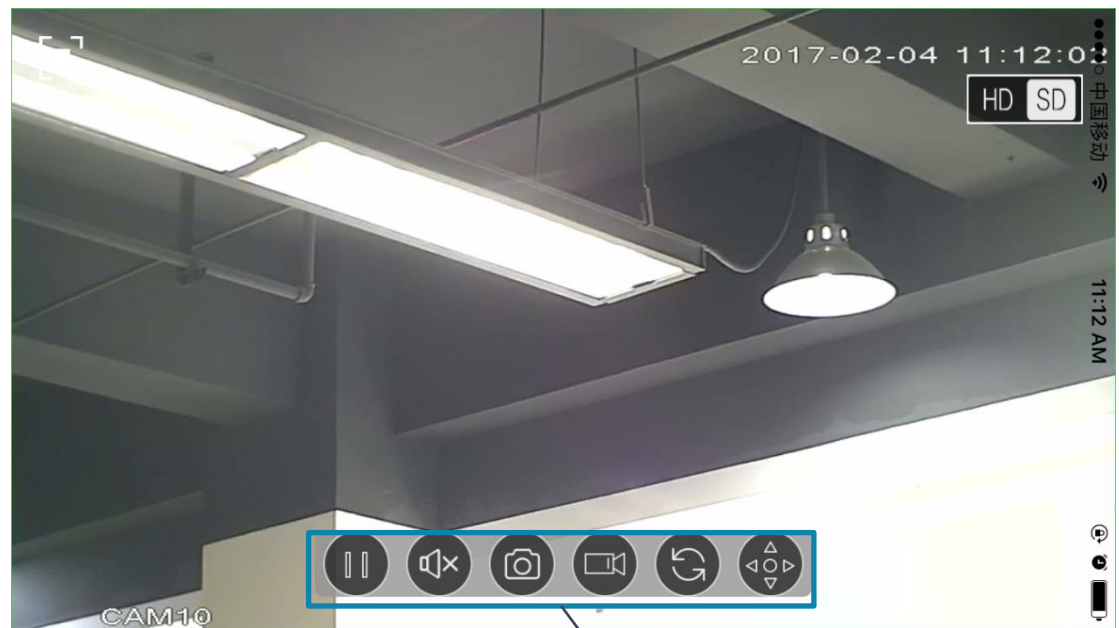

Pause/Start, Audio, Screenshot, Video, Flip, PTZ control functions are also available in full-screen interface.

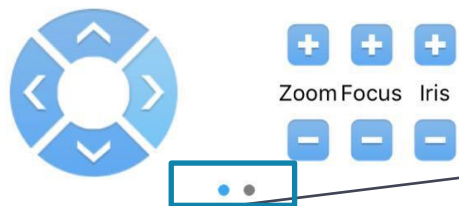


Switch function by sliding

Live Video




Science&Technology, Make Life Better

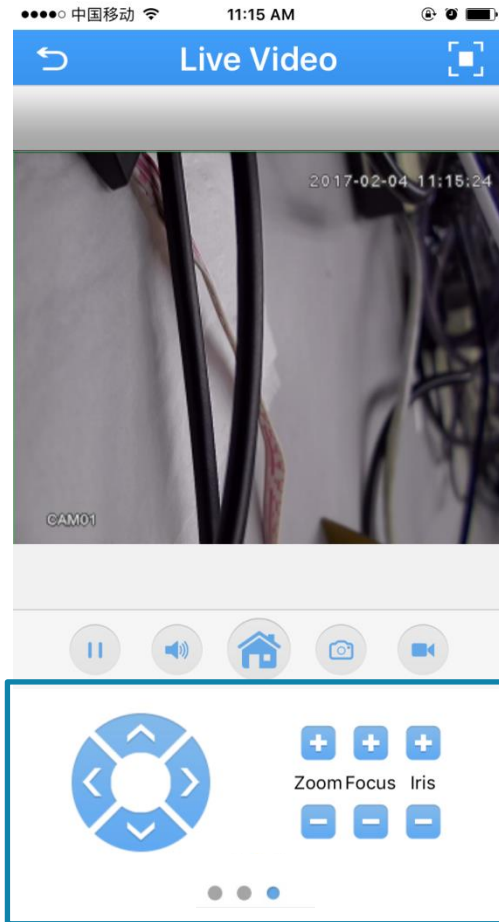


PTZ Control


Switch function by sliding

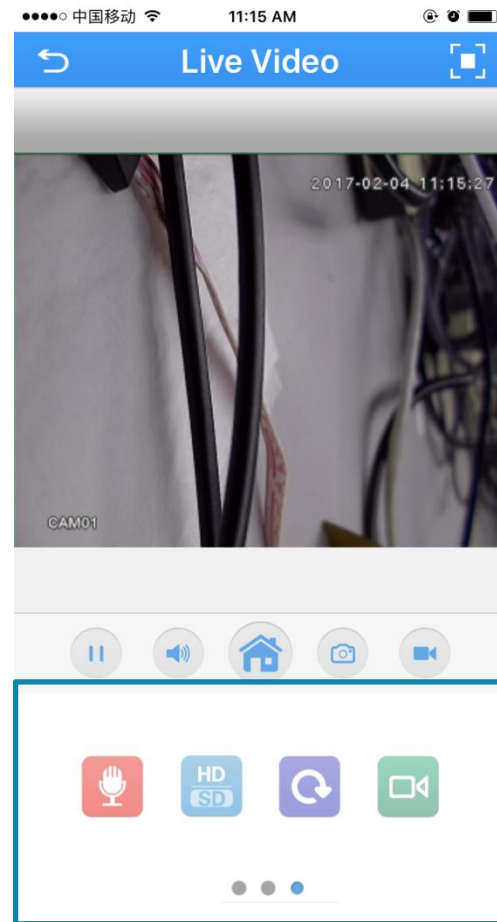

Function Zone

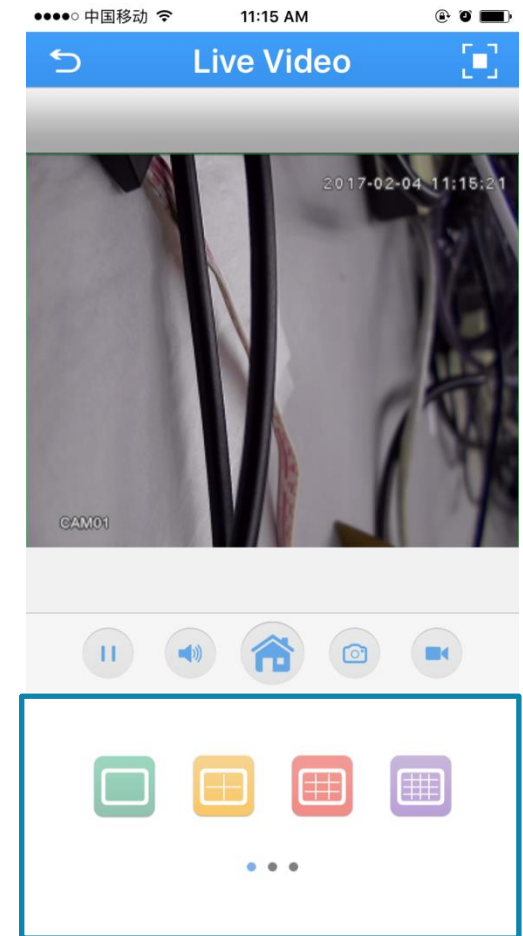

Pictures Select

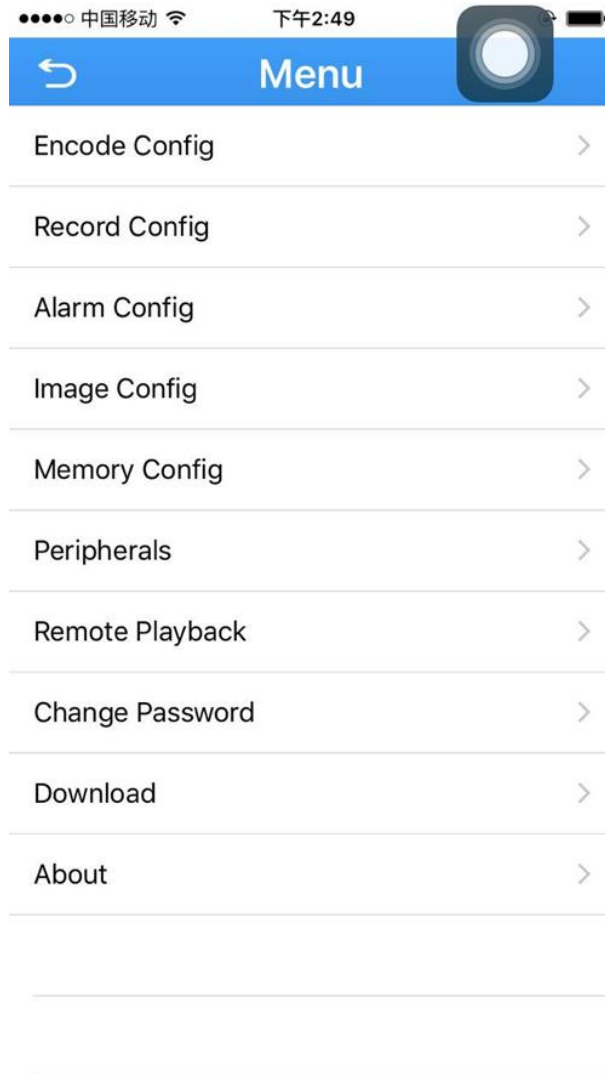

Tips:
Menu is used to modify the current preview channel Configuration.

Encode Config & Record Config



Science&Technology, Make Life Better

中国移动 11:16 AM

Encode Config Save

Main stream

Resolution:	720P
Frame Rate	25
Definition	common
Audio	<input type="checkbox"/>

Sub stream

Resolution:	D1
Frame Rate	25
Definition	common
Audio	<input type="checkbox"/>
Video:	<input checked="" type="checkbox"/>

Configure Encoding:
The configuration of the device, as well as the definition of the video can be switched here.

Video Configuration:
you can set up the pre-recording time and length of video.

中国移动 下午3:02

Record Config Save

Stream Setti... MainStream

Pre-recordin...

Length60M

Alarm Config



Science&Technology, Make Life Better




If these open, your mobile phone will get alarm push about motion detection, video loss alarm or video blind corresponding.


Image Config & Memory Config



Science&Technology, Make Life Better

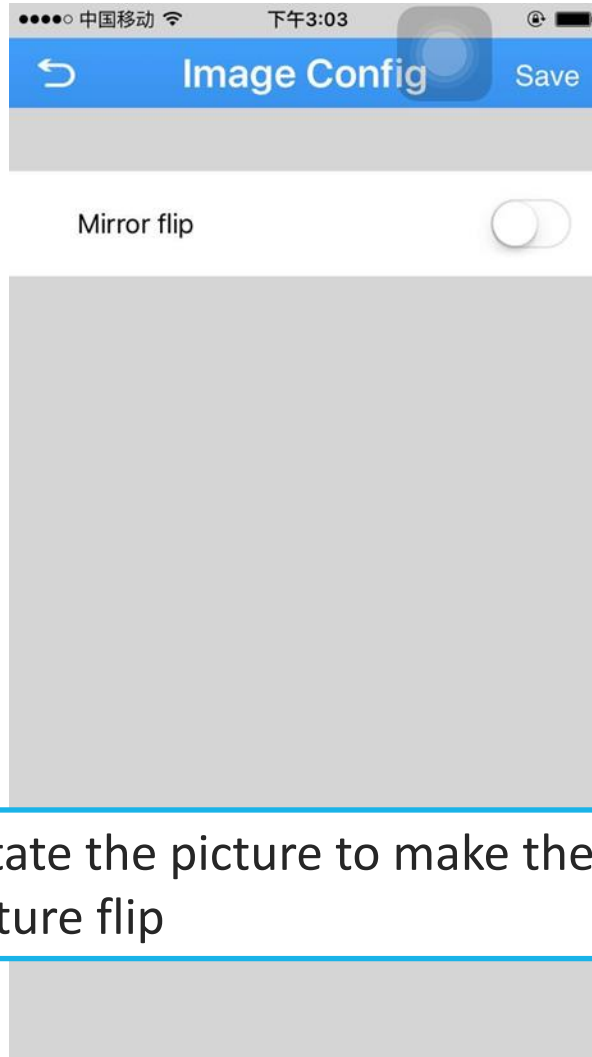



Rotate the picture to make the picture flip

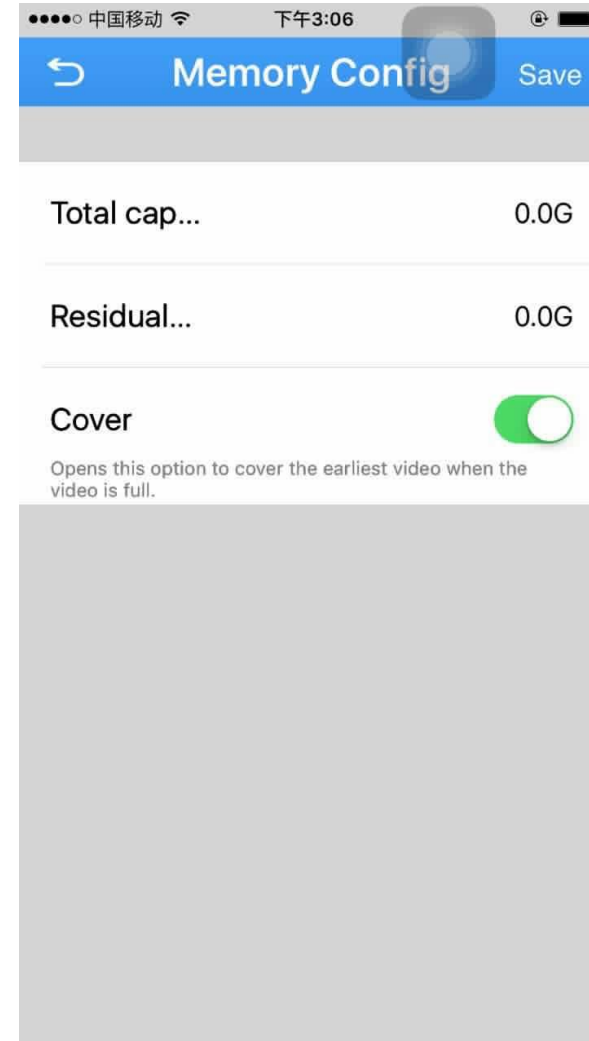

Peripherals




Science&Technology, Make Life Better

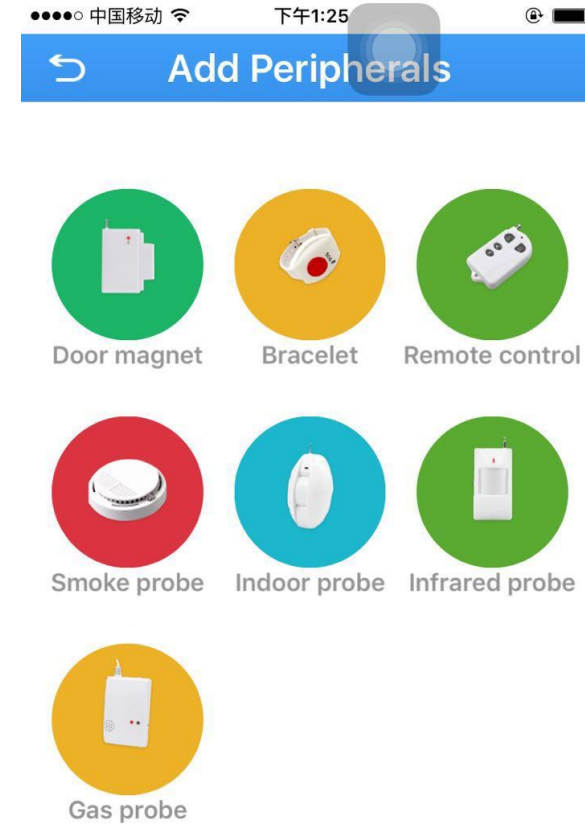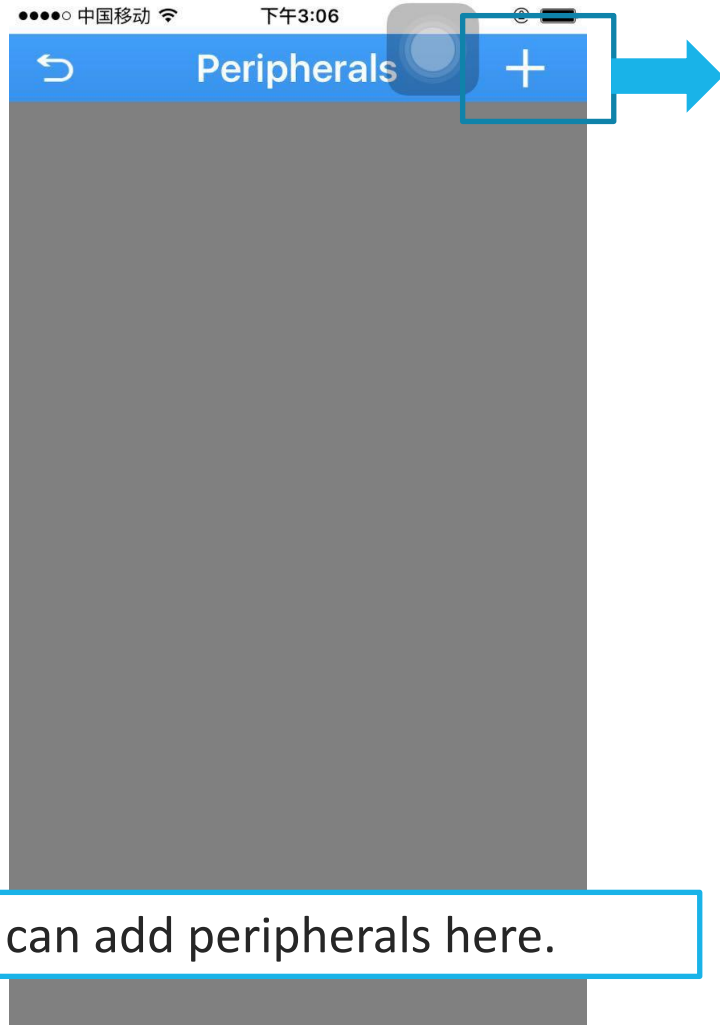

Remote Playback & Change Password




Science&Technology, Make Life Better

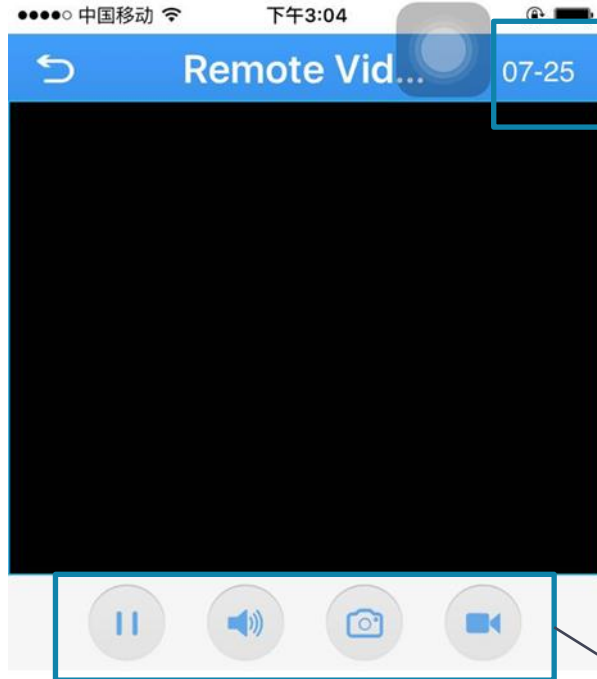

Click the top of the right to modify date.

The playback of the device video in the preview channel.


Screenshot and recording function are also provided.

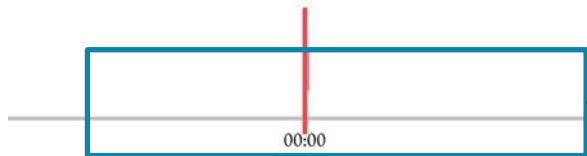

Drag the timeline behind to modify the time.



You can change definition here.

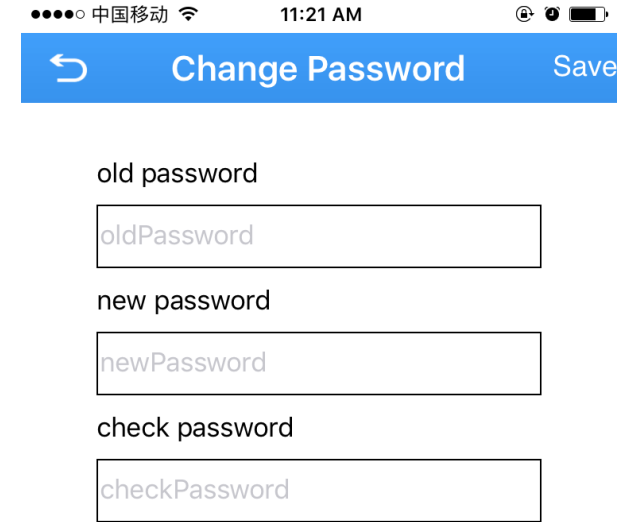

Download



Science&Technology, Make Life Better




File list is null

By File

It means the video of a settled time quantum is divided into several files, any randomly selected files can be downloaded.

By Time

It means the video of any randomly selected time point can be downloaded.

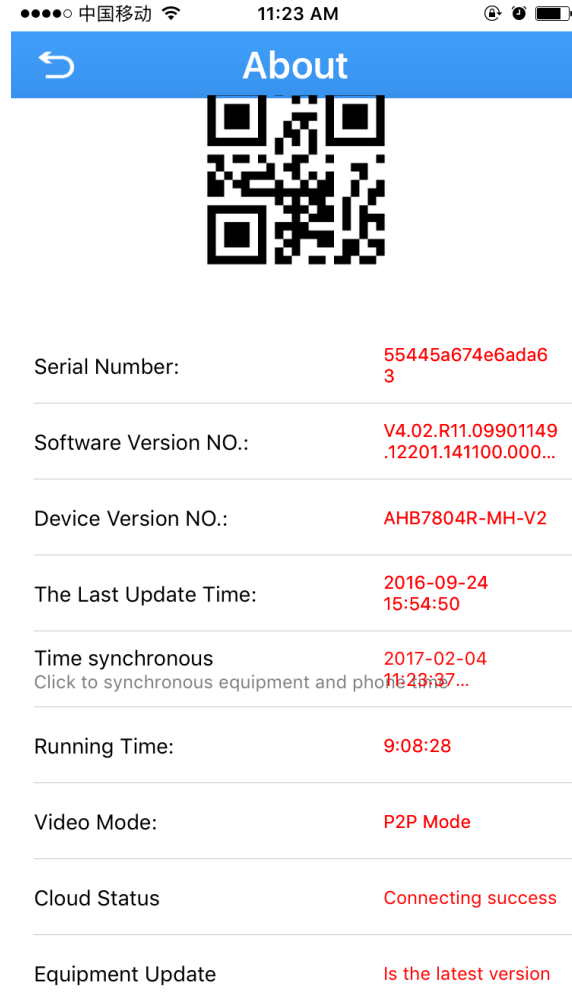

You can acquire the basic information of the device.

CONTENTS

1

Device End Config

2

About Login

3

Main Menu

4

Live Video

5


Update Log



Update Log of 2016



Science&Technology, Make Life Better

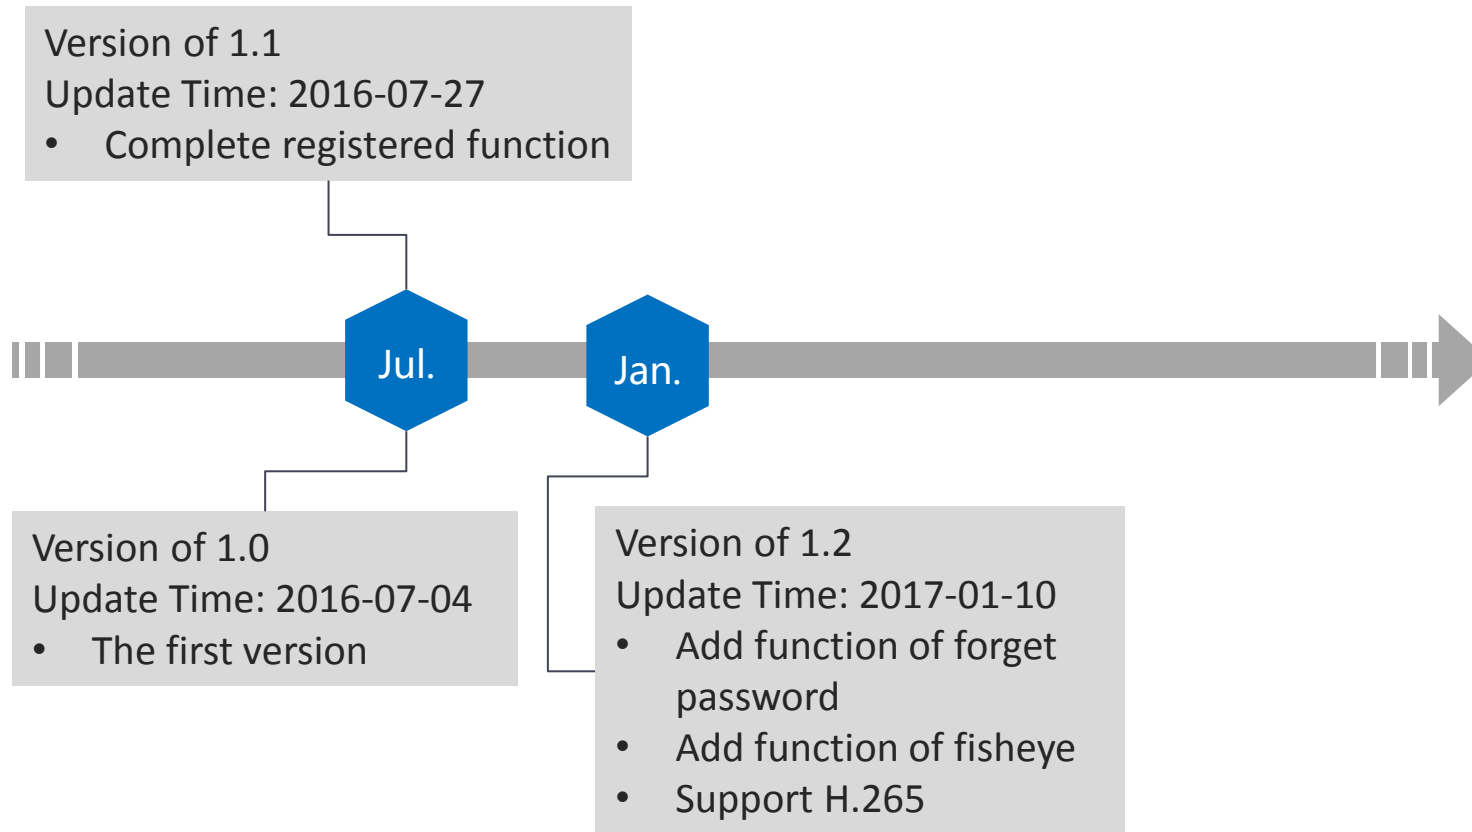



2017

Thank You

— Sophia —